

I was listening to my messages and pressed a button on the phone by mistake. Now I am not sure which one did I press, all I know is that the messages are speeded up as the play back and I need to slow them down.

The controls for message play back are:

2 - rewinds them

3 - pauses them/ takes pause off

4 - raises the volume

5 - jumps back in the message

6 - jumps ahead in the message

7 - lowers the volume

8 - slows the message down

9 - speeds the message up

0 - replays the message

- skips the message and if new, transfers it to the unopened mailbox.

You can press these buttons more than once to achieve the desired speed and volume.